





# **RK-10MT Quick Start Guide**

This guide helps you install and use your RK-10MT for the first time.

Go to <u>www.kramerav.com/downloads/RK-10MT</u> to download the latest user manual and check if firmware upgrades are available.

#### Step 1: Check what's in the box


RK-10MT Rack Mount

1 Quick start guide

2 Blank panels

S0 Screws

#### Step 2: Get to know your RK-10MT

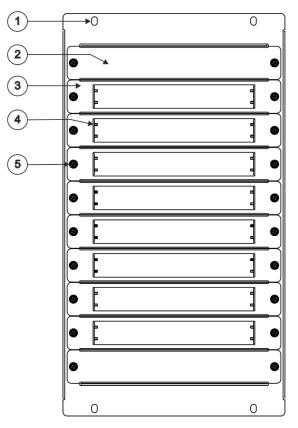


#	Feature	Function
1	Rack Adapter Screw Holes	Connect to a Rack adapter shelf.
2	Blank Panel	Blank panel to cover open slot.
3	Open Panel	Rack-mount panel with opening for inserting the device.
4	Inside Screw Holes	Insert screws (supplied) to attach the device to the open panel.
5	Knob	Turn to attach a panel to the rack.

### Step 3: Mount RK-10MT



• Ensure that the environment (e.g., maximum ambient temperature & air flow) is compatible for the device.

 Avoid uneven mechanical loading.








Rev:

#### To mount a device onto the rack:

1. Unfasten the knobs to remove the open panel.

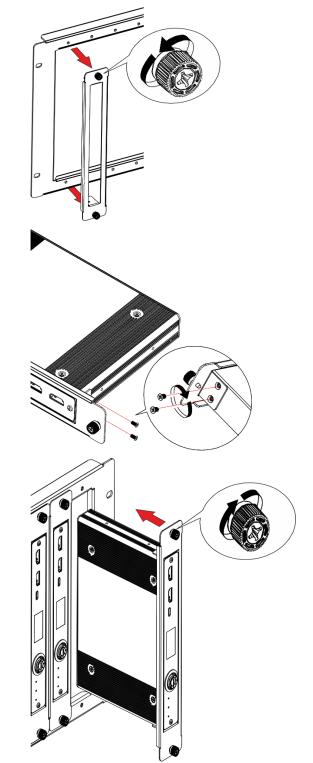

- 2. Slide the device into the panel opening.
- 3. Attach the device to the panel using 4 screws (2 on each side to secure the device to the panel.

- 4. Slide the open panel with the device into the rack opening.
- 5. Turn the knob to secure panel to rack.

## **Technical Specifications**

Environmental	Operating Temperature	0° to +40°C (32° to 104°F)
Conditions	Storage Temperature	-40° to +70°C (-40° to 158°F)
	Humidity	10% to 90%, RHL non-condensing
Regulatory	Safety	CE
Compliance	Environmental	RoHs, WEEE
Enclosure	Туре	Aluminum
General	Net Dimensions (W, D, H)	48.2cm x 26.5cm x 3.1cm (19" x 10.4" x 1.2")
	Shipping Dimensions (W, D, H)	52.5cm x 40cm x 8.5cm (20.7" x 15.7" x 3.3")
	Net Weight	1.7kg (3.7lbs) approx.
	Shipping Weight	2.5kg (5.5lbs) approx.

Specifications are subject to change without notice at <u>www.kramerav.com</u>



